

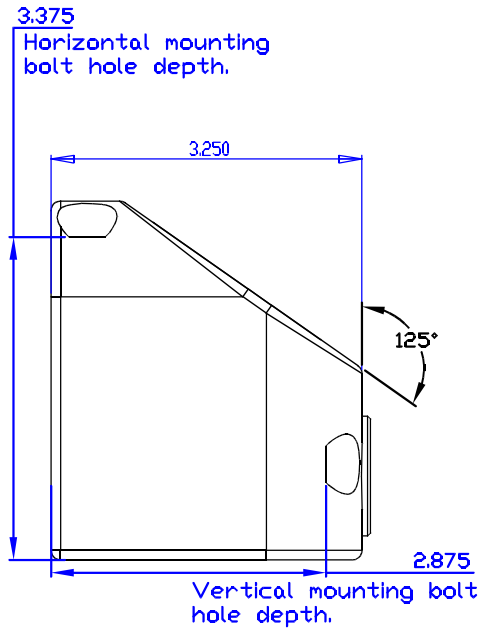
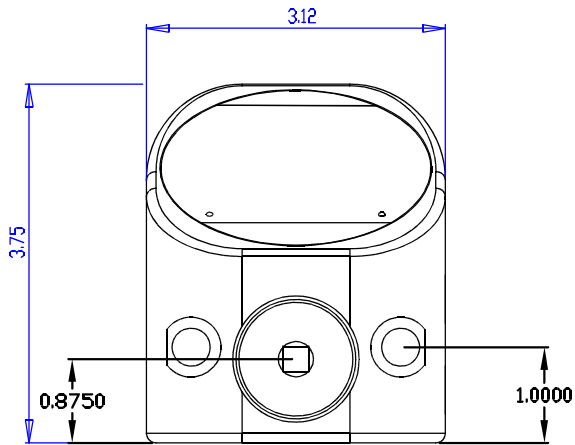


(Inches)

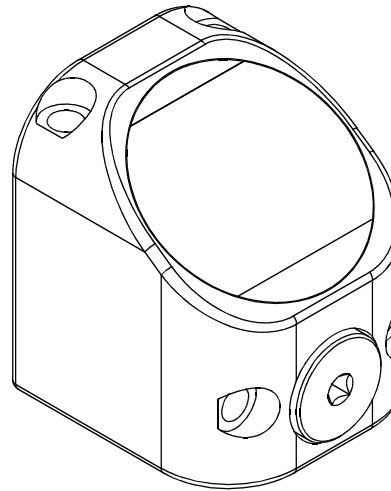

Use 3/8" Mounting Bolts (x2)

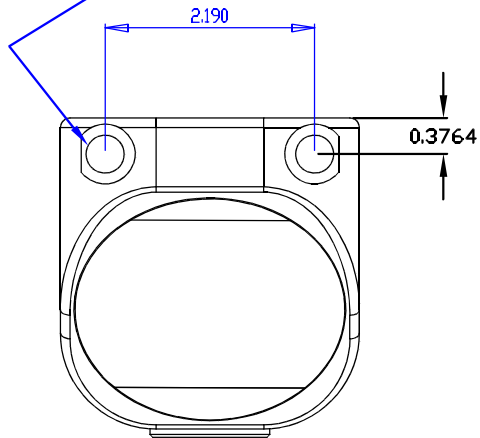

REV:		Advanced Witness Series, Inc.	
REVIEWED:		TITLE QCI Outline Dims: Reference only	
ASSY:		DRAWING NO.	
CAPACITY:	DATE 1-1-2009	SAVED AS \\QC\QC reference dims.dwg	
TOLL:	MATERIAL:	FINISH:	